

# Stressless® Emily



 
Stressless® Emily Steel Arm shown in Paloma Henna/Matte Black



## Available Modules:



- You will need 3.1" behind the sofa for the Stressless reclining function.
- Power operated headrests are standard on the Emily Corner unit (one on each side). Battery pack is optional; you need one battery pack for each module. The corner headrests are operated by two motors. You only need one transformer to power the two headrests.
- Cannot operate Power seats on both sides of the Emily Corner simultaneously. The footrests will collide if you do.
- Emily Center Module can be placed between any two modules. The Center Module, End Left Module and End Right Module cannot be setup as stand alone modules; they must be connected to a seat or corner. You cannot mount an armrest directly on the Corner Module or space modules.
- Emily End Modules can replace the armrest(s) on a sofa setup.

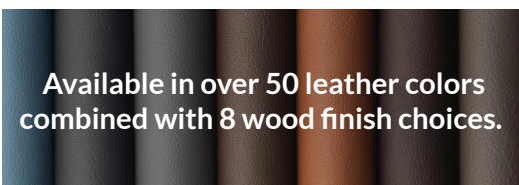

Available in over 50 leather colors combined with 8 wood finish choices.



Steel: Chrome



Steel: Matte Black



Wood



Wide


# Stressless® Emily



 
Stressless® Emily Wide Arm with Longseat (L) shown in Paloma Almond/Polished Metal

Left/Right	Center	Chair	2-Seater	3-Seater	4-Seater	Corner	Modules
Steel: 33.9" Wood: 34.3" Wide: 39"	Steel: 30" Wood: 30" Wide: 30"	Steel: 37.8" Wood: 38.6" Wide: 48"	Steel: 67.7" Wood: 68.5" Wide: 77.6	Steel: 97.6" Wood: 98.4" Wide: 107.1"	Steel: 127.6" Wood: 128.3" Wide: 136.6"	48.8"	19.7"

## Left/Right/Center Seats and Chair:

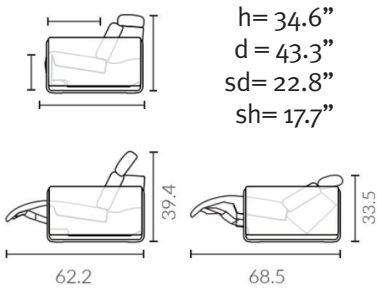


## Longseat (M and L):

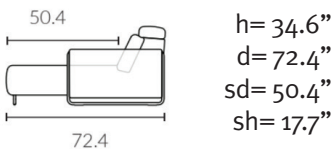 

- Longseat (M) w/ Arms Width  
Steel: 37.8" Wood: 38.9" Wide: 48"
- Longseat (M) w/ Left/Right Arm Width  
Steel: 33.9" Wood: 34.3" Wide: 39"
- Longseat (L) w/ Arms Width  
Steel: 47.2" Wood: 52.4" Wide: 61.8"
- Longseat (L) w/ Left/Right Arm Width  
Steel: 47.2" Wood: 47.6" Wide: 52.4"

## Stressless® Emily Configuration Examples

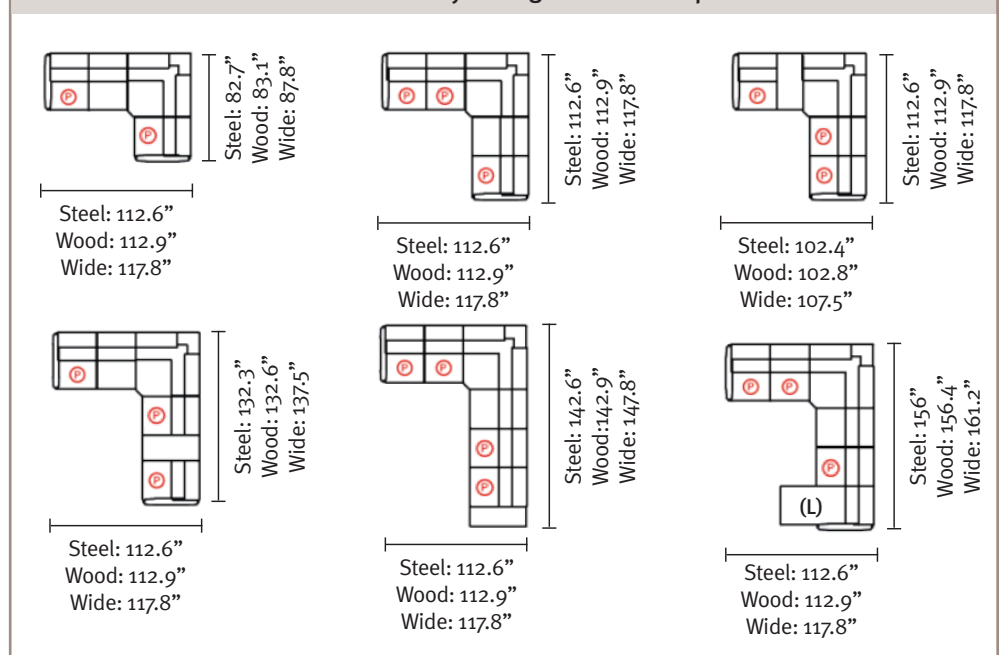 

Ⓟ ANY Left, Right and Center Seats have the option of Power Recline